


INSTALLATION INSTRUCTIONS


for Troldtekt® acoustic panels and Troldtekt® Plus installed in T35 profile system with exposed longitudinal profiles in a removable, suspended ceiling system

These instructions apply to the installation of Troldtekt® acoustic panels and Troldtekt® Plus in exposed longitudinal T35 profiles in a removable, exposed ceiling system. Download installation instructions for the Troldtekt® T35 profile system with exposed longitudinal profiles at www.troldtekt.com.


PROFILE DRAWINGS

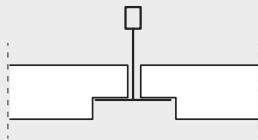


K0-FS: Troldtekt acoustic panels
With rebate for exposed T-profile
(K0 on short edges)

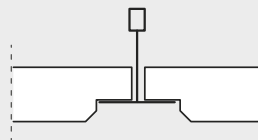


K5-FS: Troldtekt acoustic panels
With 5 mm bevel and rebate for
exposed T profile
(K0 or K5 on short edges)

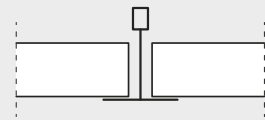


K0-S: Troldtekt acoustic panels
Square edge for exposed T profile
(K0 on short edges)

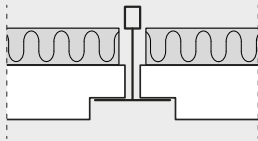

K0-FS: Troldtekt Plus
With rebate for exposed T profile
(K0 on short edges)

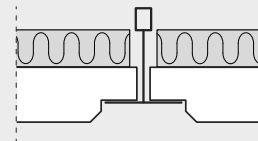

K5-FS: Troldtekt Plus
With 5 mm bevel and rebate for
exposed T profile
(K0 or K5 on short edges)

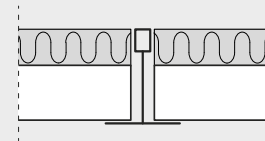

K0-S: Troldtekt Plus
Square edge for exposed T profile
(K0 on short edges)


INSTALLATION

Check that all hangers are secure after installation of the profile system. Adjust if necessary. Then place the Troldtekt panels with the keyway facing the installation direction so that the last row of panels lies loosely in the profile facing the wall.

As you place the panels, fit spacer profiles for every max. 1350 mm. The first spacer profile should be fitted max. 300 mm from the wall. Install the spacer profiles on the suspended main profiles.

NOTE: The illustration on the next page shows the installation of Troldtekt acoustic panels in stretcher bond. You can find other installation principles in the *installation instructions for the suspended T35 profile system with exposed longitudinal profiles*.

ILLUSTRATION - INSTALLATION

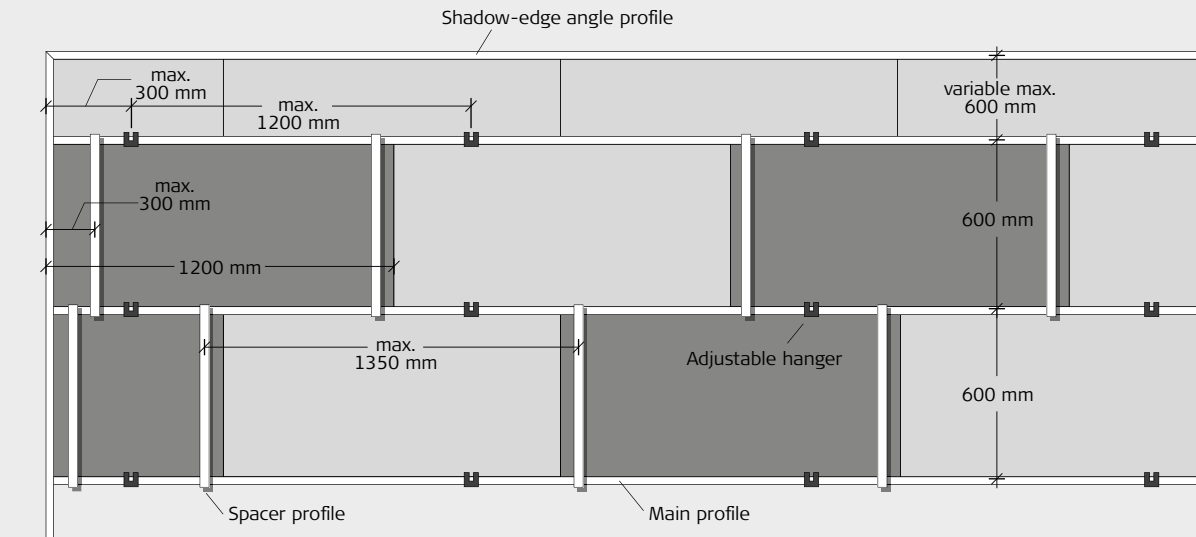

SYMBOLS

