

# INSTALLATION INSTRUCTIONS

## Troldekt® puzzle, installed with screws


These instructions apply to the installation of Troldekt® puzzle with screws on wood battens or steel profile system. If you install Troldekt® on wood battens, the battens should be min. 22 x 95 mm. You can download installation instructions for wood battens from [www.troldekt.com](http://www.troldekt.com).

### INSTALLATION

Fix the panels using Troldekt screws spaced 20 mm from the edges – as shown in the illustrations below.


Be careful not to overdrive the screw and so cause an indentation in the panel.

### PROFILE DRAWING (INDEPENDENT OF SUSPENSION)

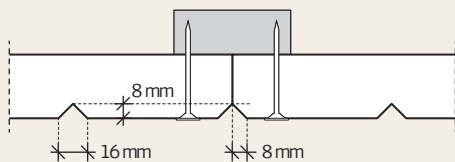


With 8 mm bevel and rebate

### ILLUSTRATION – INSTALLATION

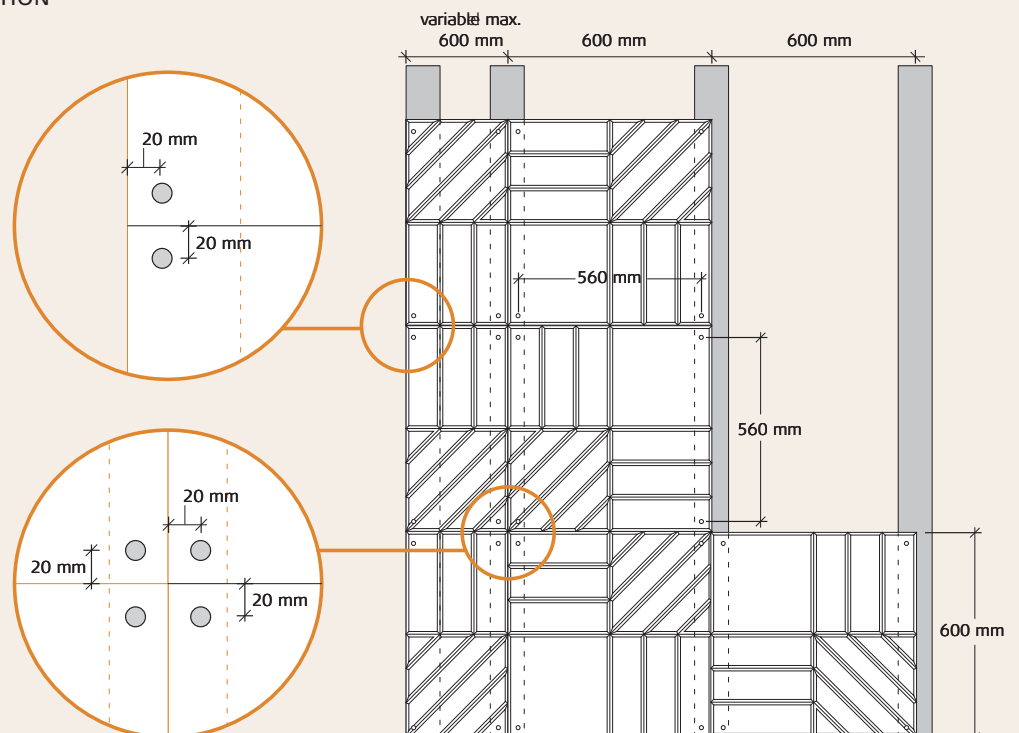

## VAPOUR BARRIER

If you need to install a vapour barrier, we recommend using polyethylene plastic sheeting. The vapour barrier must be placed behind the wood battens. Install the vapour barrier so it is well-stretched and sits tightly against the insulation.

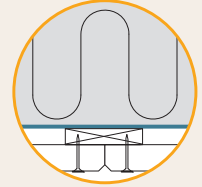

## TROLDTEKT<sup>®</sup> SCREWS

PANEL THICKNESS (mm)	PANEL WIDTH (mm)	AREA (m <sup>2</sup> )	SCREW DIMENSION (mm)	NO. OF SCREWS (per panel)	MAX. SPAN (mm)
35	600	0.36	4,2x45 / 4,2x55 / 4,2x50	4	600


Troldekt structure screw  
for wood and steel, PH2

4.2x45 mm / 4.2x55 mm



Troldekt structure screw  
for steel, PH2

4.2x50 mm

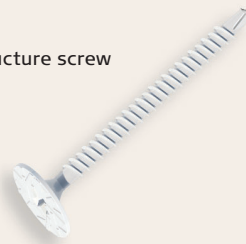

This document reflects Troldekt's knowledge of certifications, standards, and products at the time of publication.

No rights can be derived from this document.  
Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

MAY 2026 EN V01

Troldekt A/S  
Sletvej 2A  
DK - 8310 Tranbjerg J  
Tel. +45 8747 8100  
info@troldekt.dk  
www.troldekt.com