

INSTALLATION INSTRUCTIONS

Troldekt® puzzle, installed with screws


These instructions apply to the installation of Troldekt® puzzle with screws on wood battens or steel profile system. If you install Troldekt® on wood battens, the battens should be min. 22 x 95 mm. You can download installation instructions for wood battens from www.troldekt.com.

INSTALLATION

Fix the panels using Troldekt screws spaced 25/20 mm from the edges – as shown in the illustrations below.


Be careful not to overdrive the screw and so cause an indentation in the panel.

PROFILE DRAWING (INDEPENDENT OF SUSPENSION)

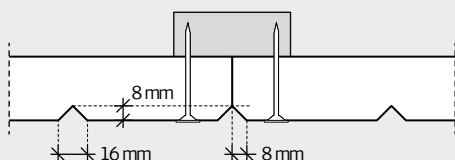


With 8 mm bevel and rebate

ILLUSTRATION - INSTALLATION

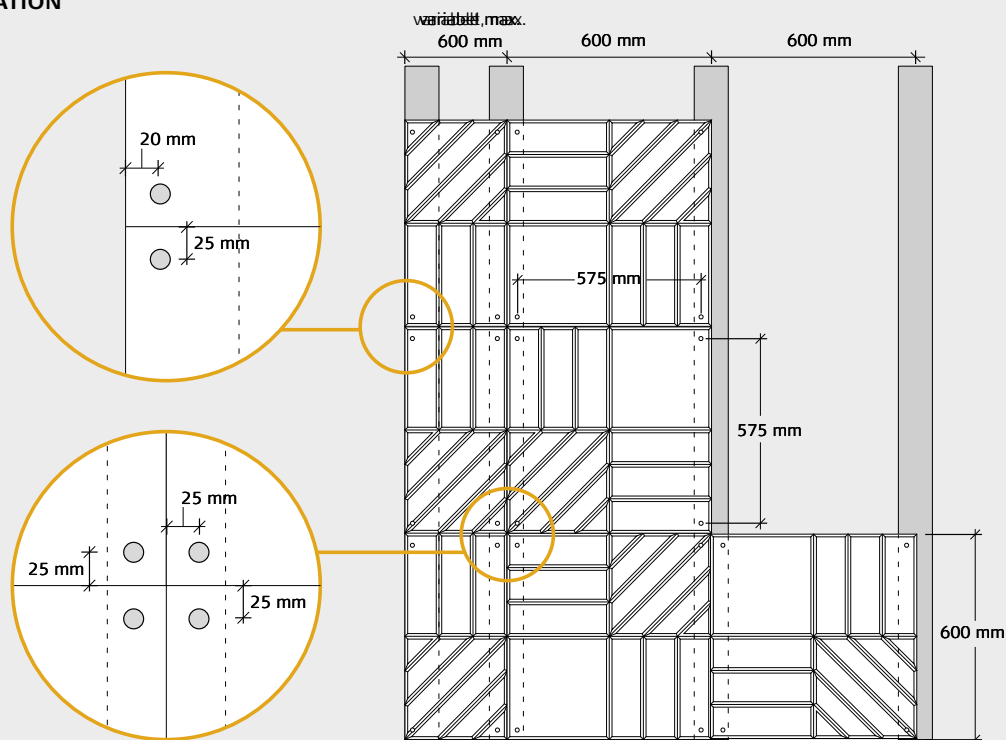

VAPOUR BARRIER

If you need to install a vapour barrier, we recommend using polyethylene plastic sheeting. The vapour barrier must be placed behind the wood battens. Install the vapour barrier so it is well-stretched and sits tightly against the insulation.

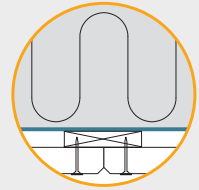

TROLDTEKT® SCREWS

PANEL THICKNESS (mm)	PANEL WIDTH (mm)	AREA (m ²)	SCREW DIMENSION (mm)	NO. OF SCREWS (per panel)	MAX. SPAN (mm)
35	600	0.36	4,2x45 / 4,2x55 / 4,2x50	4	600

Troldekt structure screw
for wood and steel, PH2

4.2x45 mm / 4.2x55 mm



Troldekt structure screw
for steel, PH2

4.2x50 mm

