


VAPOUR BARRIER

If you need to install a vapour barrier, we recommend using polyethylene plastic sheeting. The vapour barrier must be placed above the wood battens, i.e. between the battens and the foot of the rafters. Install the vapour barrier so it is well-stretched and sits tightly against the insulation.

Please refer to the manufacturer's instructions.

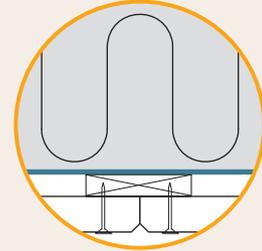

TROLDTEKT[®] SCREWS

Panel thickness (mm)	Panel length (mm)	Screw dimension (mm)	No. of screws (per panel)	Max. span (mm)
35	1200	4.2 x 45 / 4.2 x 55 / 4.2 x 50	6	600

Troldekt structure screw
for wood and steel, PH 2

4.2x45 mm / 4.2x55 mm



Troldekt structure screw
for steel, PH 2

4.2x50 mm



This document reflects Troldekt's knowledge of certifications, standards, and products at the time of publication.

No rights can be derived from this document.
Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

JANUARY 2026 EN V01

Troldekt A/S
Sletvej 2A
DK - 8310 Tranbjerg J
Tel. +45 8747 8100
info@troldekt.dk
www.troldekt.com