


# INSTALLATION INSTRUCTIONS


## Troldekt® acoustic panels and Troldekt® Plus Installed in exposed T35 profiles in removable, suspended ceiling system

These instructions apply to installation of Troldekt® acoustic panels and Troldekt® Plus in exposed T35 profiles in removable, exposed ceiling system.  
Download installation instructions for Troldekt® T35 profile system from [www.troldekt.com](http://www.troldekt.com).


### PROFILE DRAWINGS

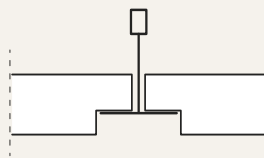


K0-FS: With rebate for exposed T-profile

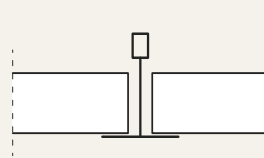


K0-S: Square edge for exposed T-profile

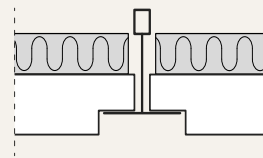


K0-FS: Troldekt akustik Plus

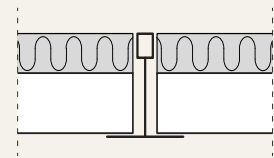

K0-S: Troldekt akustik Plus

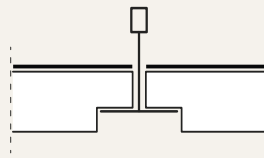

K0-FS: Troldekt Plus 25 & 35

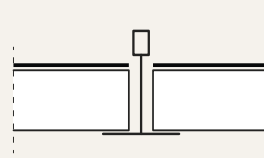

K0-S: Troldekt Plus 15, 25 & 35


### INSTALLATION

Check that all hangers are secure after installation of the profile system. Adjust if necessary. Now lay the Troldekt panels in the grid.

**Note:** When installing **600 × 600 mm** square panels, it is important to ensure that the wood wool fibres run mainly parallel in one direction.

To ensure a uniform appearance, install the panels so that the printed Troldekt texts on the back of the panels all run in the same direction.

### ILLUSTRATION – INSTALLATION

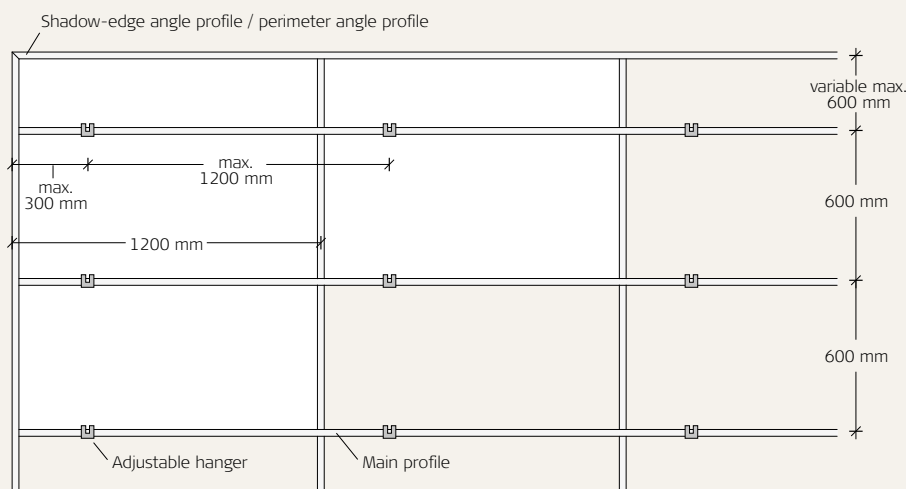

This document reflects Troldekt's knowledge of certifications, standards, and products at the time of publication. No rights can be derived from this document. Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

MAY 2025 EN V01

Troldekt A/S  
Sletvej 2A  
DK - 8310 Tranbjerg J  
Tel +45 8747 8100  
info@troldekt.dk  
www.troldekt.com