

INSTALLATION INSTRUCTIONS

Troldtekt® access panel 300x300 mm and 400x400 mm installed in C60 profile system

These instructions apply to installation of the Troldtekt® access panel 300x300 mm and 400x400 mm in a C60 profile system.

INSPECTION ON RECEIPT


Check that the following components are complete and undamaged on receipt. Please inform the supplier immediately of any visible defects or non-conformities as we are unable to accept claims regarding visible defects or non-conformities once the access

panel has been fitted. Please also refer to the instructions regarding storage and acclimatisation as well as care and maintenance of Troldtekt acoustic panels – download at www.troldtekt.com

COMPONENTS




Outer frame

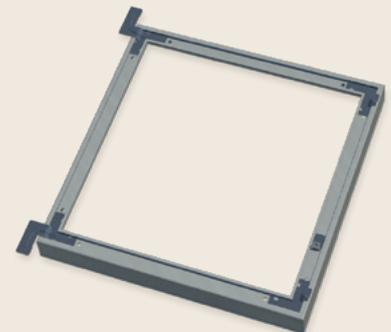


Inner frame


INSTALLATION DIAGRAM

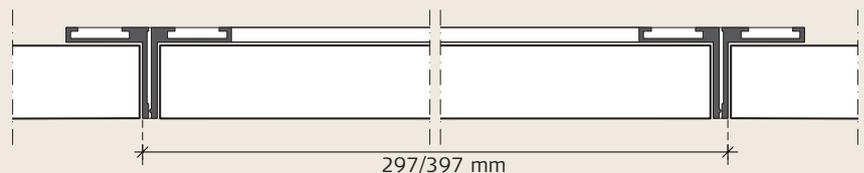


SEPARATING THE ACCESS PANEL PRIOR TO INSTALLATION

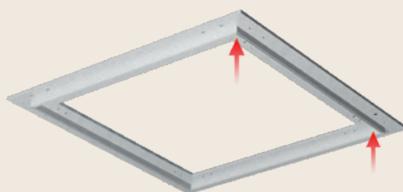

1: Release the inner frame from the outer frame by pressing it from below. This releases the latch mechanism.

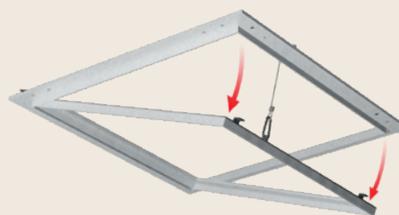

2: Once the frame is open, release the snap hook.

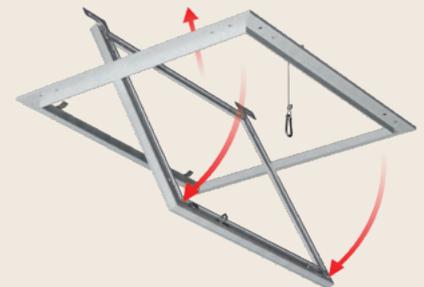

3: The frames can now be separated.

INSTALLATION OF 300X300 AND 400X400 MM ACCESS PANEL



1: Cut a hole for the outer frame, and apply assembly adhesive on the back of the panel.




2: Separate the outer frame from the inner frame, and then press it down into the Troldekt[®] acoustic panel.




3: With the outer frame installed, now screw the acoustic panel in place in the C60 profile system.



4: Cut out a section of acoustic panel for installing in the inner frame of the access panel. Secure the panel with four self-drilling screws. The access panel can now be put into place.

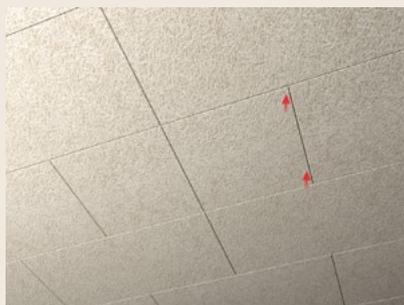

A: To open the access panel, press the Troldekt acoustic panel lightly under the push release locks.

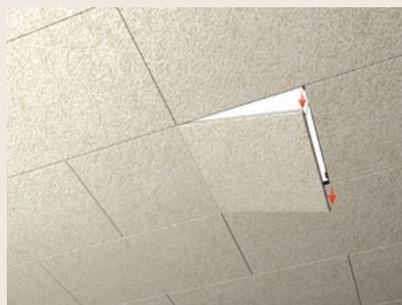

B: Release the snap hook to open the access panel completely.



This document reflects Troldekt's knowledge of certifications, standards, and products at the time of publication.

No rights can be derived from this document. Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

MARCH 2026 COM

Troldekt A/S
Sletvej 2A
DK - 8310 Tranbjerg J
Tel. +45 8747 8100
info@troldekt.dk
www.troldekt.com