

# INSTALLATION INSTRUCTIONS

Troldtekt® access panel 600x1200 mm  
Installed in C60 profile system

These instructions apply to installation of the Troldtekt® access panel 600x1200 mm in a C60 profile system.

## INSPECTION ON RECEIPT

Check that the following components are complete and undamaged on receipt. Please inform the supplier immediately of any visible defects or non-conformities as we are unable to accept claims regarding visible defects or non-conformities once the access

panel has been fitted. Please also refer to the instructions regarding storage and acclimatisation as well as care and maintenance of Troldtekt acoustic panels – download at [www.troldtekt.com](http://www.troldtekt.com)


## COMPONENTS




Outer frame



Inner frame with pre-installed acoustic panel



A



B




C

A. Nonius quickhanger, upper part


B. Nonius quickhanger, lower part

C. Nonius split-pins, two pins per fitting

## INSTALLATION DIAGRAM

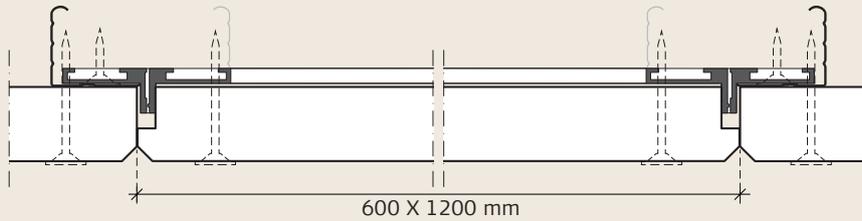


## SEPARATING THE ACCESS PANEL PRIOR TO INSTALLATION

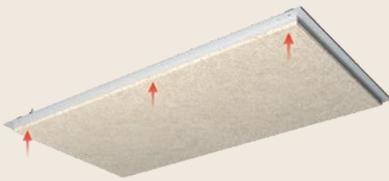

**1:** Release the inner frame from the outer frame by pressing it from below. This releases the latch mechanism.



**2:** Once the frame is open, release the snap hook.

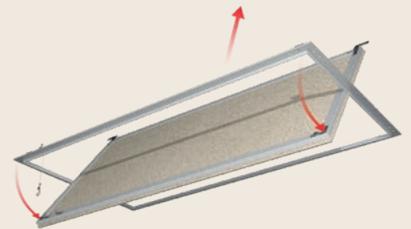


**3:** The frames can now be separated.


## INSTALLATION OF 600X600 MM ACCESS PANEL




**A:** Make cuts as shown to enable installation in the two C60 profiles which will carry the access panel.

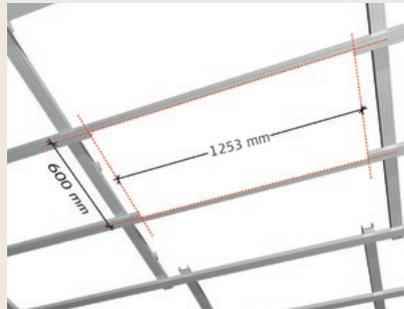

**B:** Profile system prepared for installation of the 1200 mm access panel.

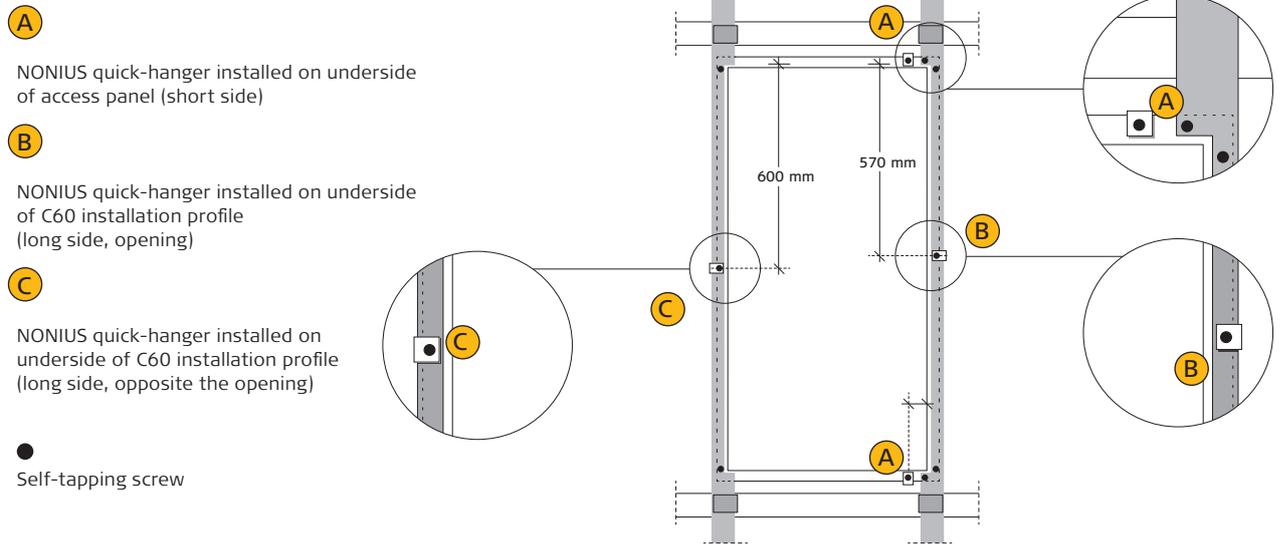

**C:** Hold the outer frame in position and secure it to the profiles with seven self-drilling screws. Then replace the access panel inside the outer frame.

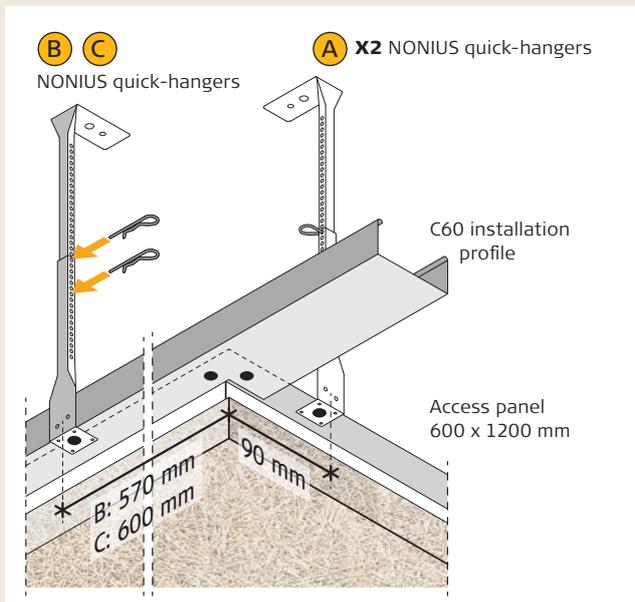

**D:** Install four nonius quick-hangers here.




**E:** To open the access panel, press the Troldekt acoustic panel lightly under the push release locks.




**F:** Release the snap hook to open the access panel completely.

## LOAD BEARING REPLACEMENT

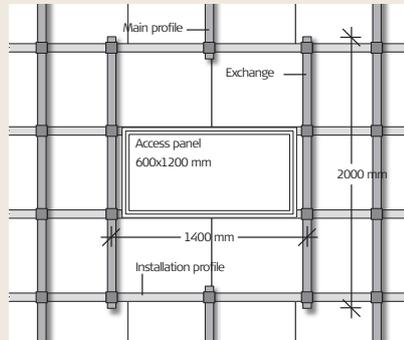

Load bearing replacement with 1 main profile interrupted

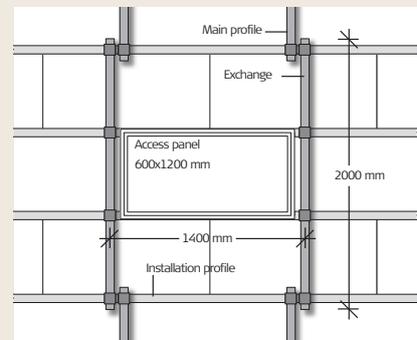

Load bearing replacement with 2 main profiles interrupted

## ACCESSORIES INCLUDED

Product name	Nonius quick-hanger, upper part	Nonius quick-hanger, lower part	Nonius split-pin
Length (mm)	790	-	-
Quantity per access panel	4 pcs.	4 pcs.	8 pcs.



This document reflects Troldekt's knowledge of certifications, standards, and products at the time of publication.

No rights can be derived from this document.  
Changes, typesetting and printing errors reserved.

The most recent version can be found online by scanning the QR code.

MARCH 2026 COM

Troldekt A/S  
Sletvej 2A  
DK - 8310 Tranbjerg J  
Tel. +45 8747 8100  
info@troldekt.dk  
www.troldekt.com